

# STAYPUT® FASTENERS

A U S T R A L I A

REGISTERED DESIGN  
**T LOCK FASTENER**



Stayput® Horizontal and Vertical fasteners have provided a reliable, secure, and corrosion free fixing for over 50 years. However, increasingly customers have been asking for a fastener with similar characteristics in a more modern design. So with this in mind we set about designing a new fastener that was less obtrusive when covers are removed, a desirable feature for discerning boat owners.

Introducing the Stayput® T Lock. Now when covers are removed all that remains is a neat, low-profile fixture. The Stayput® T Lock consists of three 100% corrosion free nylon composite components: a Cap, Key, and Base. There are 2 options for the Base; a low 5mm profile rectangular base with 2 fixing holes, or a round 8mm profile base with a single fixing hole. Both bases are designed to be secured using a 6g countersunk screw. The Round Base requires a suitable adhesive sealant to be applied at installation to ensure it will not rotate during use. The Cap and Key are installed into the fabric through a #4 eyelet or 10mm grommet, and are simply pressed or tapped together. Once installed the Cap and Key remain attached to the cover. To secure your cover simply insert the Key into the Base and rotate the Cap ¼ turn clockwise until engaged with the Base. To remove simply turn the Cap ¼ turn counterclockwise.

**CAP**



**KEY**



**FLAT BASE**



**ROUND BASE**



All 4 parts are available from your Stayput® Fasteners distributor in Black and White while the Caps are also available in Beige and Light Grey. We also have a T Lock kit available with everything you need to get started in a sturdy carry case.



Made in Australia By:

**STAYPUT® FASTENERS**  
**A U S T R A L I A**


[www.stayputfasteners.com.au](http://www.stayputfasteners.com.au)  
[info@stayputfasteners.com.au](mailto:info@stayputfasteners.com.au)



# STAYPUT® FASTENERS

A U S T R A L I A


## T LOCK ASSEMBLY INSTRUCTIONS

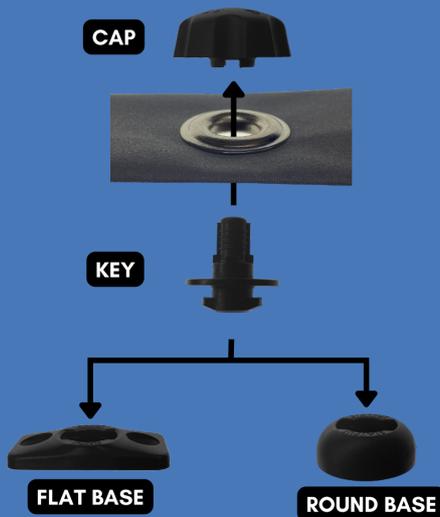

The Cap and Key are designed to be permanently installed through a 9.5-10mm (3/8") eyelet or grommet with a finished thickness of <5mm. This allows the parts to rotate freely.

**To install:** line up the two ridges along the key shaft with the corresponding slots under the cap and squeeze or tap the parts together until fully engaged.

Both bases should be fixed using 6g countersunk screws or suitable rivets. The round base requires the additional application of a suitable adhesive sealant to ensure it will not rotate during normal use. Follow instructions of adhesive to ensure it is cured before the fastener is used.

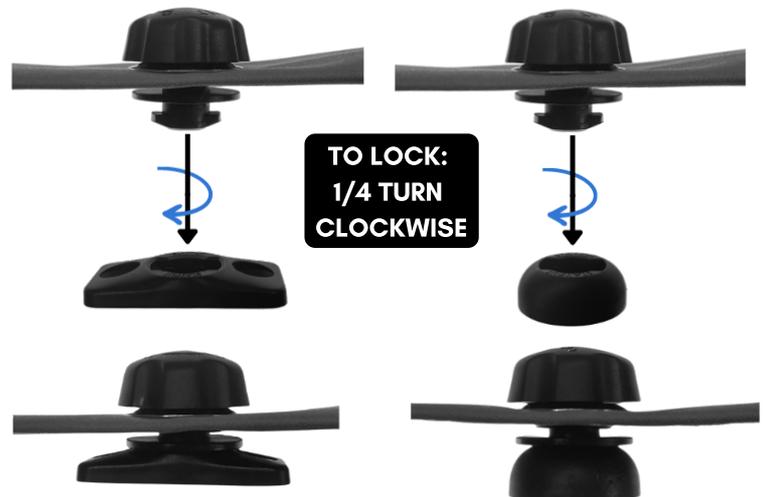

Made in Australia By:  
**STAYPUT® FASTENERS**  
A U S T R A L I A

[www.stayputfasteners.com.au](http://www.stayputfasteners.com.au)  
[info@stayputfasteners.com.au](mailto:info@stayputfasteners.com.au)

